




Scan Me  
to watch  
Assembly  
Instructions



*Kai*  
— By —  
*i5 Industries*

# Assembly: Credenza Shell

MODELS: C2466 24x66 Credenza Shell  
C2471 24x71 Credenza Shell

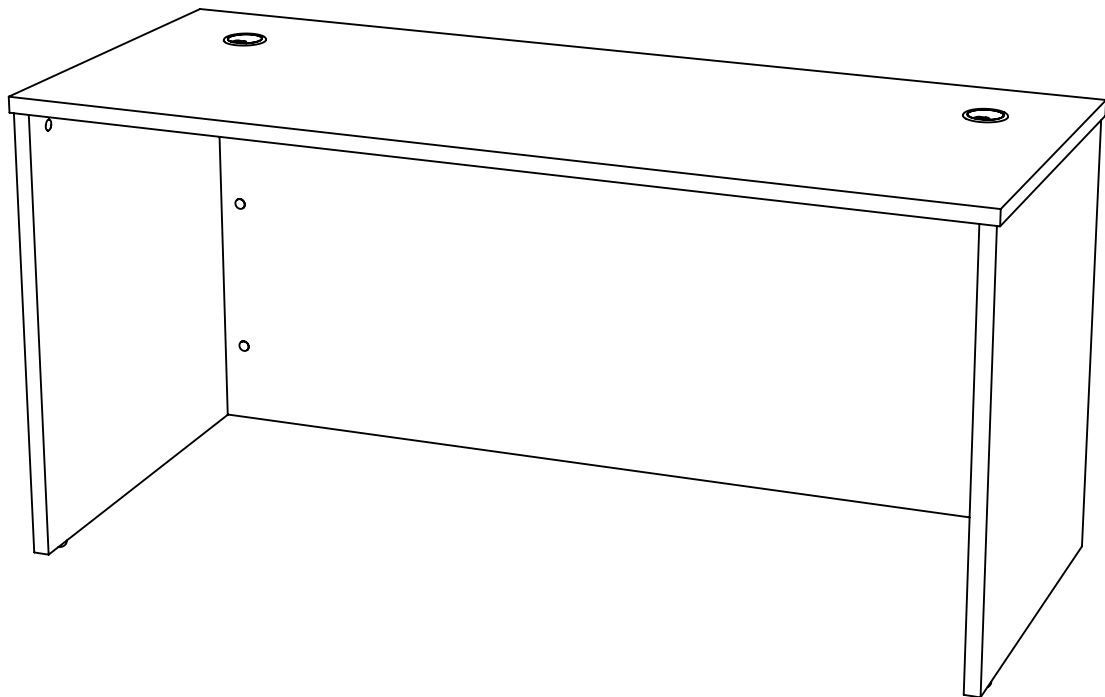



- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Line up holes for cam locks.
- Put on sticker caps last.
- Keep all hardware parts out of reach of children.
- Inspect all holes to ensure there isn't any debris.



**TWO PEOPLE ARE  
REQUIRED TO  
ASSEMBLE AND MOVE  
THIS MODEL**


Required tools:








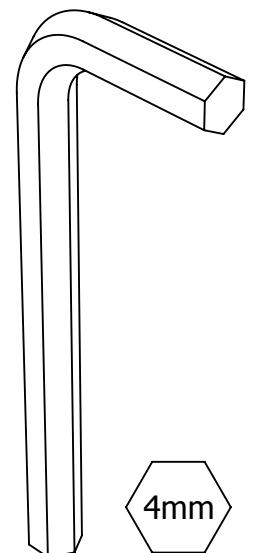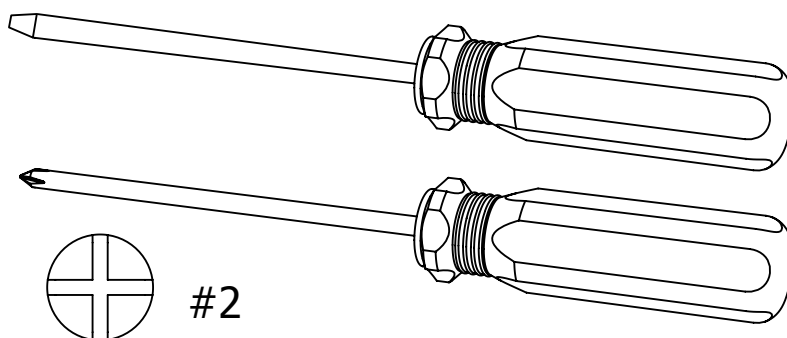



Flathead or Philips  
#2 Screwdriver

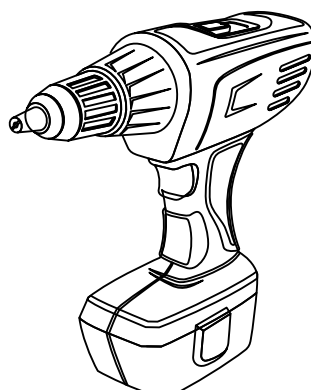



Recommended tools:

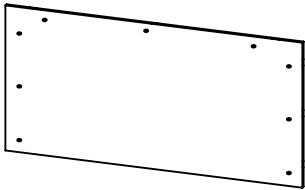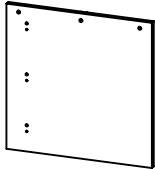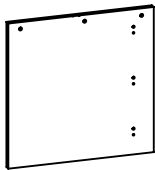
**Highly recommended when  
assembling: L-shape  
configuration or  
attaching pedestals**

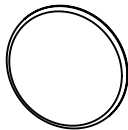

PARTS & HARDWARE		CREDENZA SHELL
PART	QTY.	
MODESTY PANEL	1	
RIGHT SIDE END PANEL	1	
LEFT SIDE END PANEL	1	
TOP	1	
PART	QTY.	
<b>A</b> Metal Pin	15	
<b>B</b> Cam Lock	15	
<b>C</b> Set Screw	15	
<b>D</b> Cap Sticker	15	
<b>E</b> Adjustable Glide	4	
<b>F</b> Wood Dowel	15	
<b>G</b> Grommet Hole Cover	2	


Complete this step for both the left and right end support.

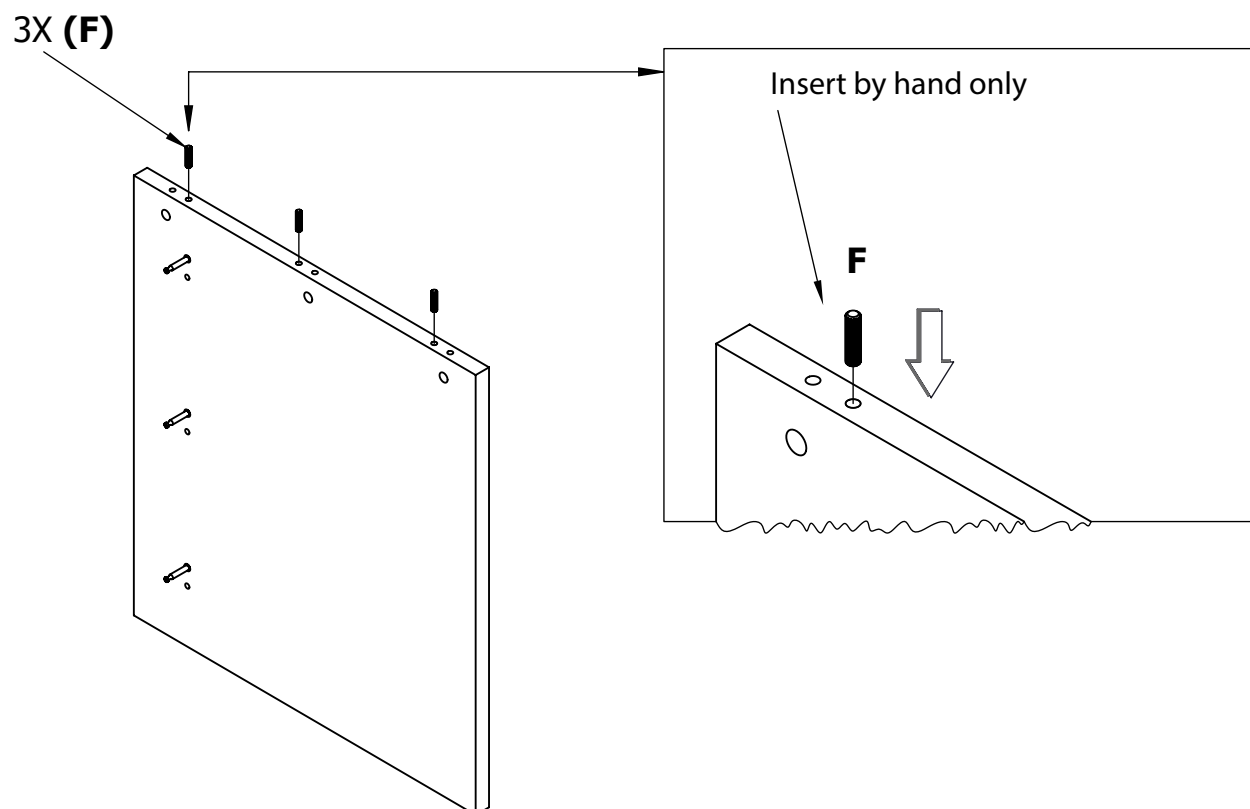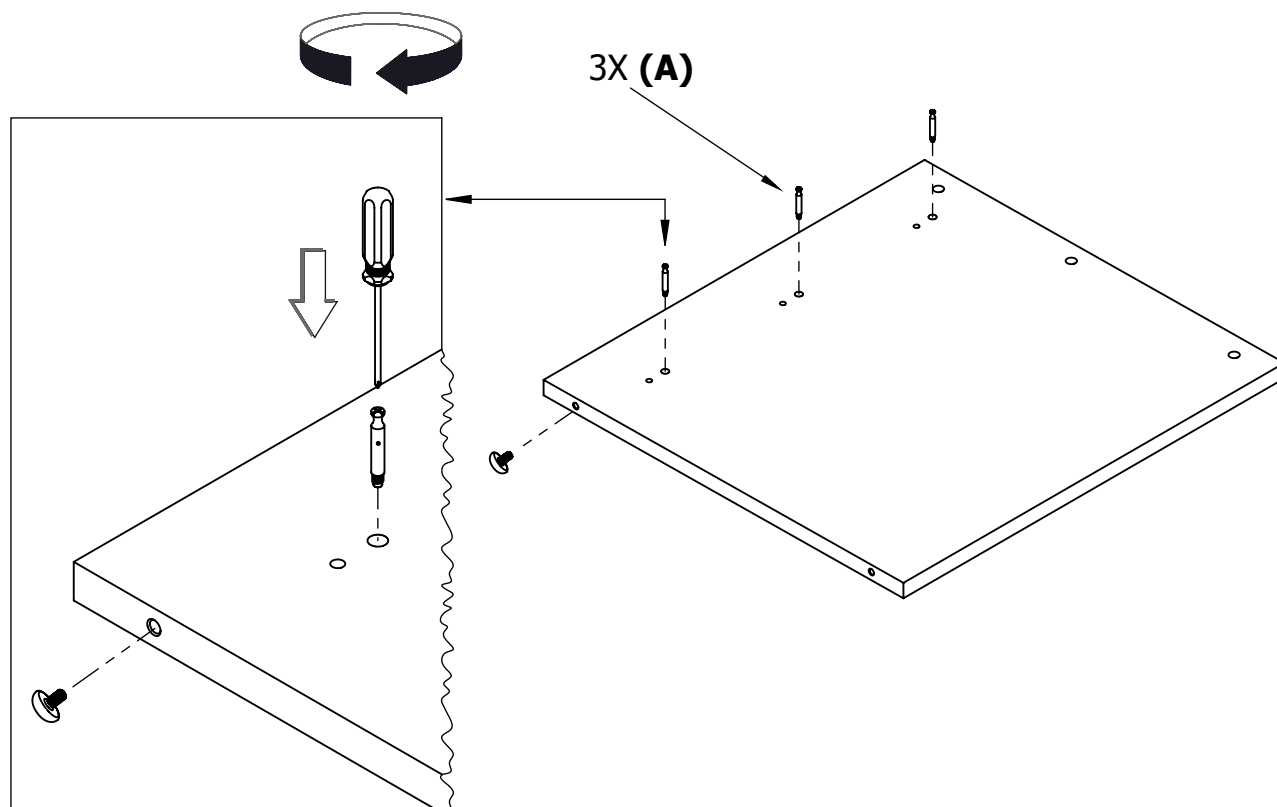


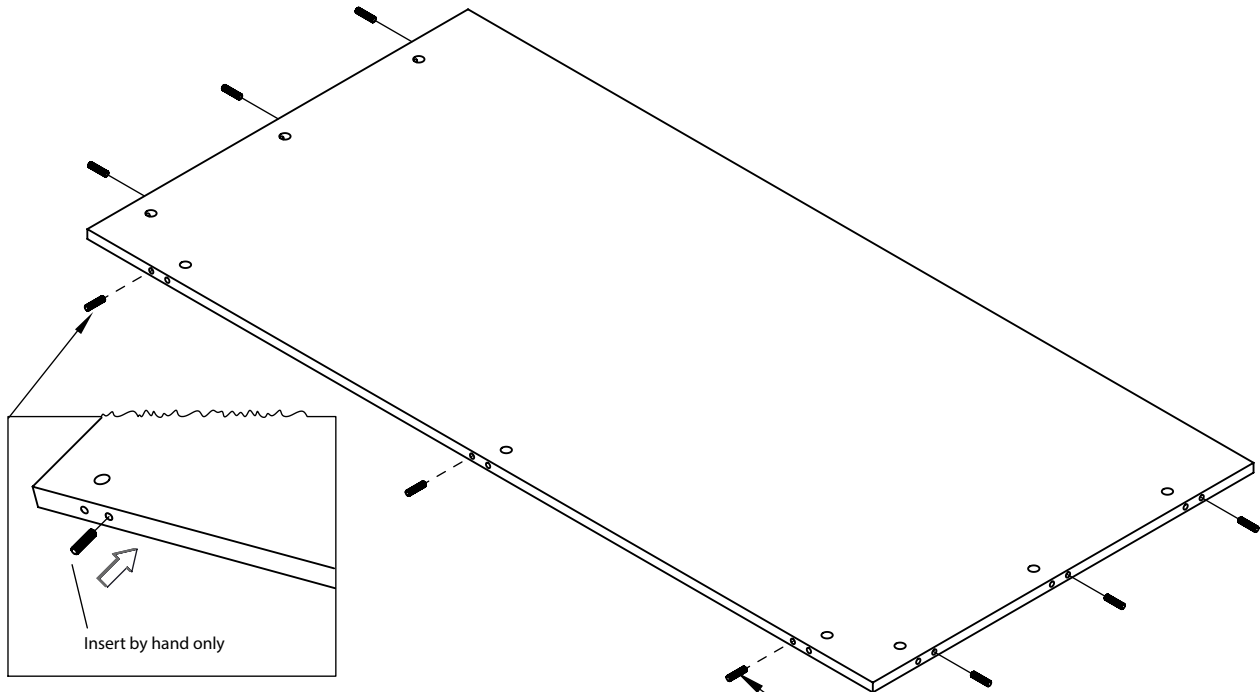


9X (A)

9X (F)

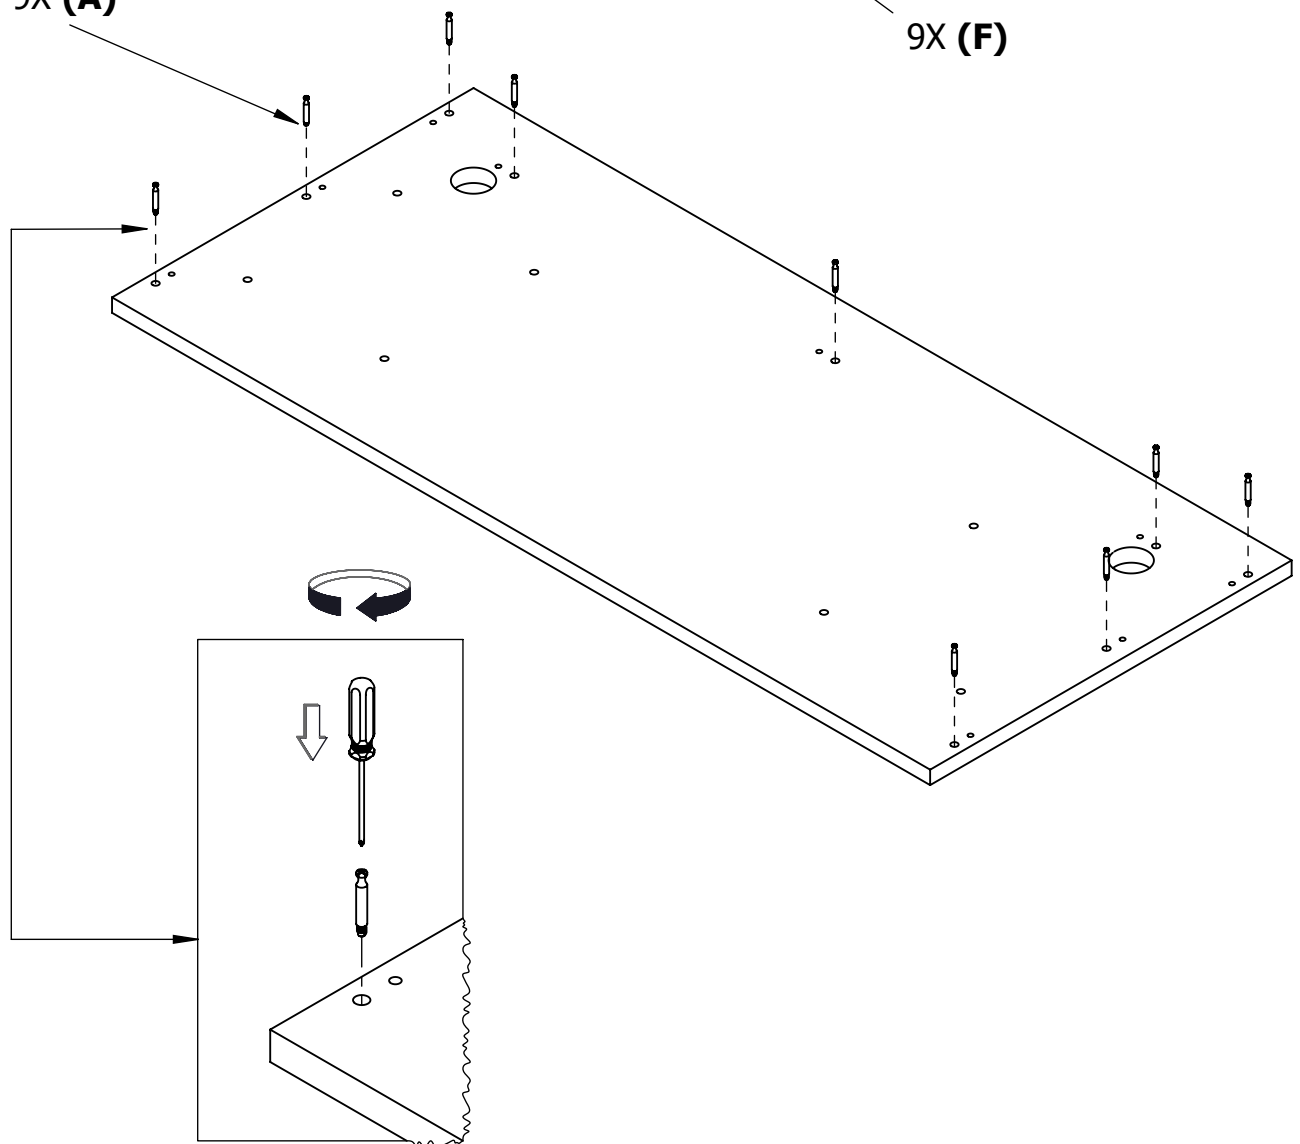

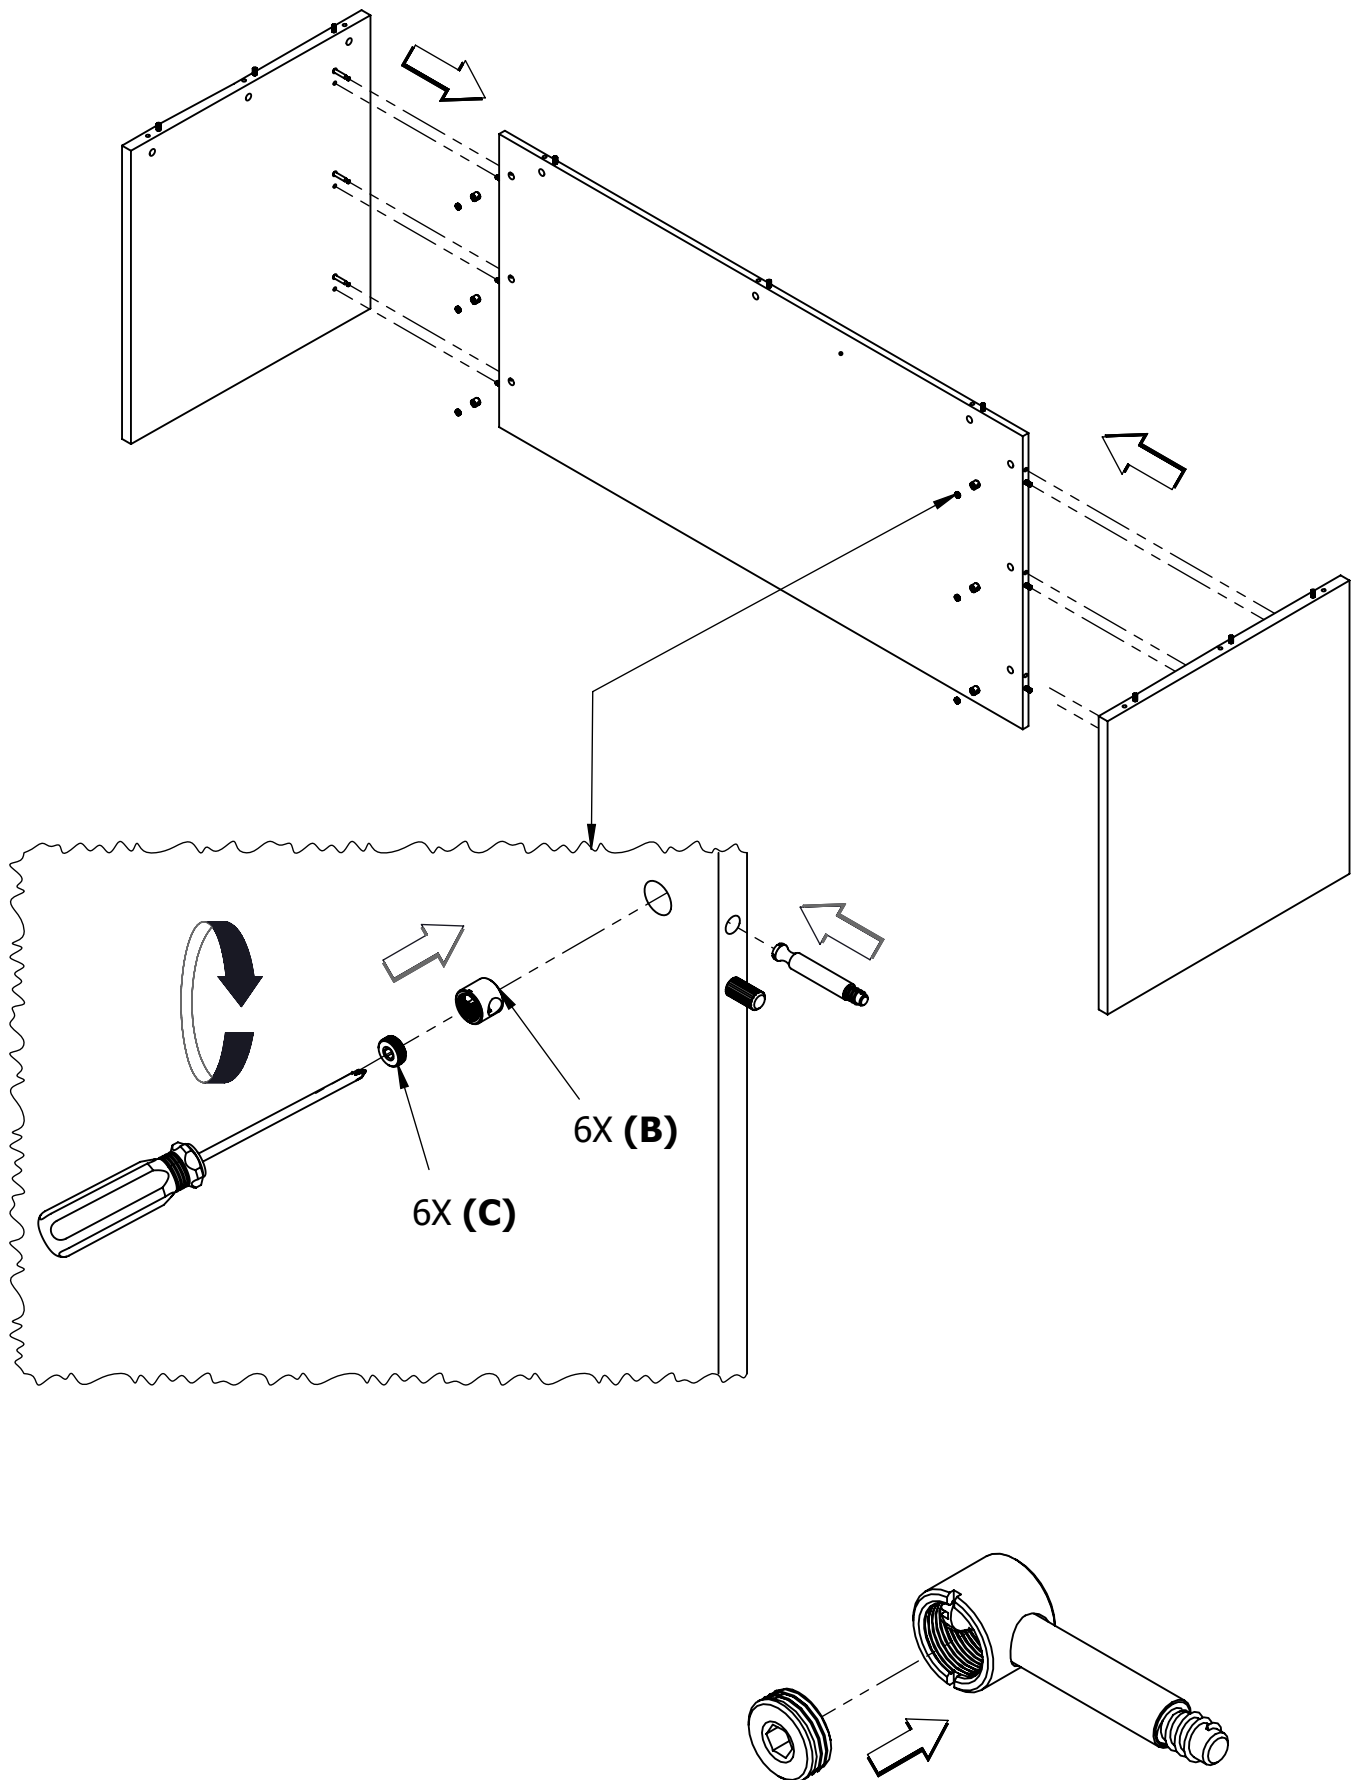

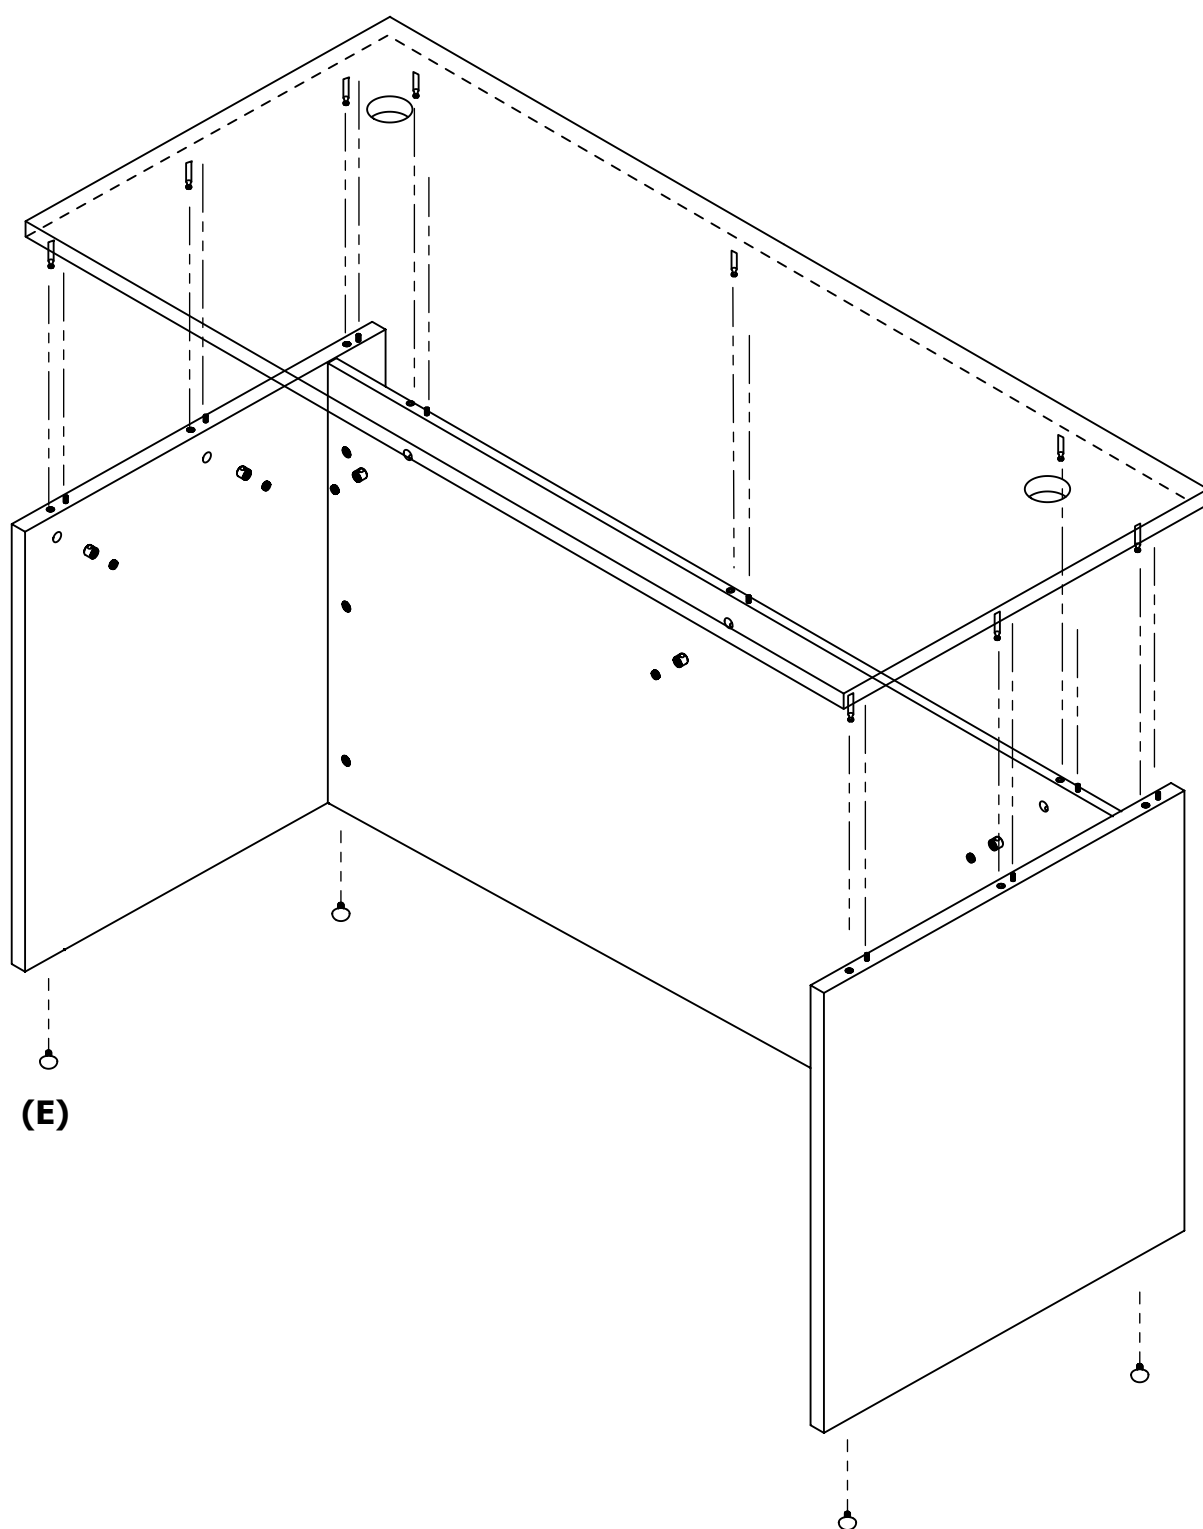

**Note: Place cap stickers (D) on any exposed holes.**

